Finish Care and Cleaning Instructions

Thank you for purchasing a fine decorative product from Armac Martin. Our products are of the finest quality and will provide years of worry-free use with proper care and maintenance.

• Please do not use abrasive cleaners, ammoniated products, rubbing alcohol, detergents, astringents, bleach based cleaners, aggressive chemicals, abrasive cleaning pads, or harsh polishes on the product.

Care Of Finishes

Lacquered finishes
PBL, SBL, ABL, SAS, SAL, AMB, ASP, ACP, CBP, MBL
We recommend the occasional use of a soft cloth. Abrasive cleaning products should never be used as they will escalate the speed in which the lacquer breaks down.

Plated finishes (un-lacquered)
PNP. PCP, SNP, SCP, NBP, HBN
We recommend the occasional use of a soft cloth and the use of a quality metal polish will help preserve the finish.

Non plated finishes (Un-lacquered)
PBUL, SBUL, ABUL, BEL
We recommend the occasional use of a soft cloth and the use of a quality metal polish will help preserve the finish if highly polished. Our antique un-lacquered finishes are designed to naturally oxidise overtime.

Included in box

1 x Flush Pull

2 snap off screws 

Customer care

please visit our website

www.armacmartin.co.uk

Armac Martin
160 Dollman Street,
Duddeston,
Birmingham,
B7 4RS

ARMAC MARTIN


Est.1929 • BIRMINGHAM • ENGLAND

160 Dollman Street,
Duddeston,
Birmingham,
B7 4RS

www.armacmartin.co.uk

Installation Guide

LYNDON FLUSH PULLS
BARTLEY FLUSH PULLS
DRIFFOLD FLUSH PULLS

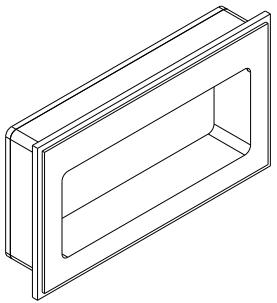

We recommend fitting is carried out by a suitably qualified tradesman

Tools you will need
Appropriate safety equipment i:e safety glasses
Spirit level
Drill dia 4.0 mm
Screwdriver
Tape Measure
Pencil

Step One – mark out the pocket taking care to measure the dimensions from your recess pull


Step Two – router pocket & drill holes with 4 mm drill

Step Three – cut the rear fix m4 screws to the appropriate size for the cabinet .
place m4 snap of screws into holes from the inside of the cabinet


Step Four – offer up recess pull and position in pocket to m4 snap off screws and fix to cabinet

CODE	DIM A	DIM B	DIM C	DIM D	RAD
LYN/FLUSH/100	94	48	87	15	2.5
LYN/FLUSH/175	169	48	163	15	2.5
LYN/FLUSH/250	244	48	238	15	2.5
LYN/FLUSH/350	344	48	338	15	2.5
BAR/FLUSH/100	94	48	87	15	2.5
BAR/FLUSH/175	169	48	163	15	2.5
BAR/FLUSH/250	244	48	238	15	2.5
BAR/FLUSH/350	344	48	338	15	2.5
DRI/FLUSH100	94	48	87	15	2.5
DRI/FLUSH175	169	48	163	15	2.5
DRI/FLUSH250	244	48	238	15	2.5
DRI/FLUSH350	344	48	338	15	2.5

Step One - hole & pocket pattern

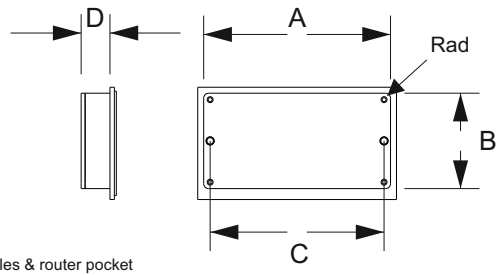

Step Two - drill holes & router pocket

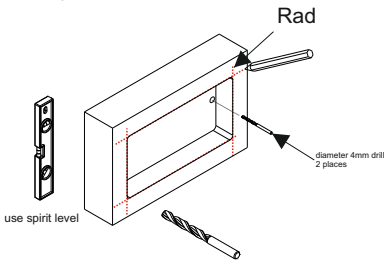

Step Three & Four - secure recess pull to cabinet / door

